

Same indicates moving mode, same direction.

Hold indicates non-transmit mode.

Slow illuminates in same direction mode to indicate slower mode selected.

Fast illuminates when the unit is in fastest vehicle mode.

Lock illuminates while target speed is locked.

Fastest Display/Target Lock Display tracks highest speed in fastest mode or displays locked target speed.

Test performs internal system check.

OPP indicates moving mode, opposite direction.

Target Display shows speed of closing or opening vehicle.

RFI indicates excessive radio frequency interference detected.

ERR indicates internal error detected.

BATT indicates low voltage condition.

Bar Graph indicates range setting.

Patrol Display shows speed of patrol vehicle.

Power Control turns the unit on or off.

Range selects the target distances.

*Actual Size*

Mode selects stationary or moving mode.

Audio sets the volume for Doppler audio.

